

# Chromebook Directions

## 1) Power ON the Chromebook:

Plug-in the charger to a wall outlet and connect to the Chromebook (\*batteries may need to recharge).

Open the Chromebook and press the power button



located in the upper-right hand corner of the keyboard.

## 2) Connect to WiFi (network):

Once powered-up, go to the bottom right-hand corner of the screen, select the US|WiFi|Battery|Time section:



A new window will open, select the WiFi icon



and connect to your WiFi network.

## 3) Login to the Chromebook:

Using the student's Google account (@mcpsmd.net), enter the student ID and password then select the Next button.



Once logged-in, student can navigate normally as they would while on school premise.

**For Technology Assistance with Chromebooks, please contact Arcola's IT support via e-mail at [Deborah J Jordan@mcpsmd.org](mailto:Deborah_J_Jordan@mcpsmd.org).**